

Use and Maintenance

- SC5000

ATTENTION! Do not use the machine before you have read and understood the User Manual



1. Check the battery charge (and if necessary re-charge).



2. E-stop icon appears on display when E-stop switch is engaged. Twist E-stop switch to enable machine function.



3. Fill the tank with a clean water. The clean water temperature must not exceed 40 °C. Make sure the solution valve under the machine is open.



4. Recovery tank seal cover must correctly installed and in good condition.




5. Check the squeegee blades are not damaged and install the squeegee by turning the yellow knobs. Check the height of the squeegee by adjusting the castor wheels and the angle knob.



6. Press the Guide Bar forward while sliding the brush under the deck and stop when the brush is contacting both legs of the guide bar. Repeat this step for the brush on the other side of the deck. Turn the machine ON and push Click On button (Disc version only).



7. Adjust side skirts height.

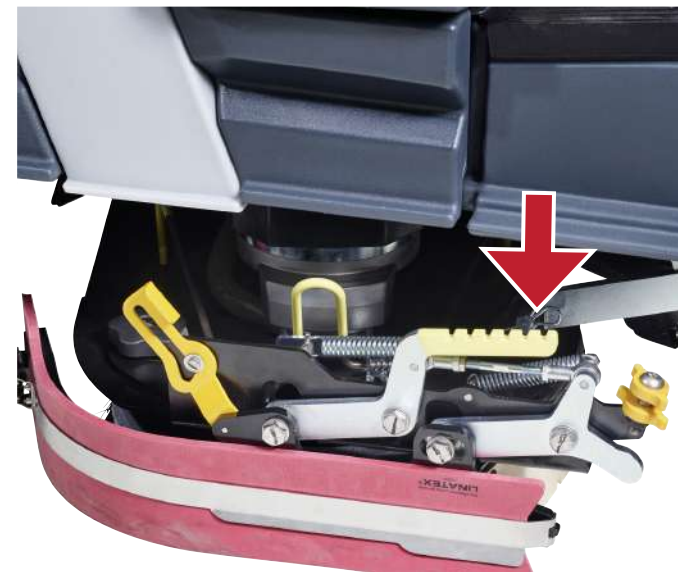

8. Lift side skirts when double scrubbing is needed.



9. Press One-Touch button to engage brush deck and squeegee.



10. Adjust water flow and detergent.



11. Press "I" scroll down to faults and press ">" button to view faults if needed.



12. Empty the recovery tank with the squeezable hose. Empty the debris tray and clean/wash the recovery tank inside.



13. Slide out, check, empty and clean the debris cage (cyl version)



14. Turn the brushes counter clock wise and remove the brushes or pad holders. Rinse the brushes or pads in warm water and hang up to dry.




15. Untighten the yellow knobs, take the squeegee off and remove debris. Check and clean the squeegee blades.



16. Clean the filter:
A) Close the solution valve under the machine.
B) Remove the transparent cover and the gasket, then remove and clean with fresh water the filter inside. C) Reassemble the filter.



17. Clean the machine using a damp cloth and where needed use a neutral cleaning product.

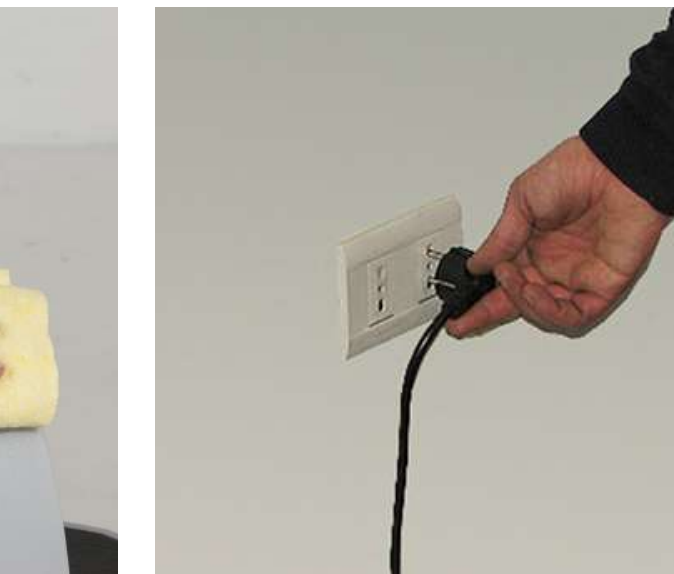

18. Charge the machine after usage/when needed.

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS

Troubleshooting

- SC5000

ATTENTION! Do not use the machine before you have read and understood the Instructions for User Manual

The machine doesn't work as it should?



1 Check battery charge gauge.



2 E-stop icon that appears on display when E-stop switch is engaged. Twist E-stop switch to enable machine function.



3 Check battery cables are well connected together.




4 Recovery tank seal cover must correctly installed and in good condition.

The suction doesn't work as it should?



1 Check if the suction hose is correctly installed and cleaned.

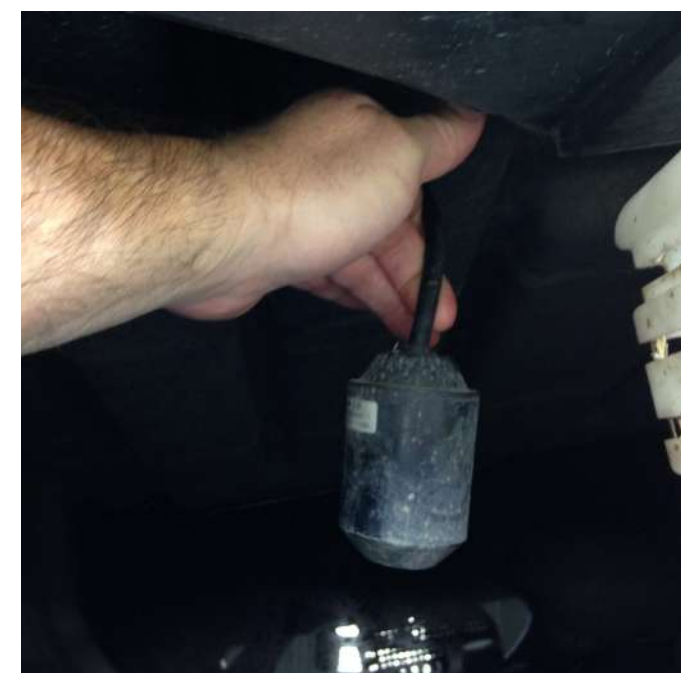

2 Inspect recovery tank float switch operation



3 Check if squeegee blades are damaged or dirty.



4 Close the recovery tank cover properly and/or verify the gasket wear.

The machine doesn't clean as it should?



1 Check if you have the right water settings.




2 Check if the solution tap is open.



3 Check if the solution filter is cleaned.

The brush don't work as they should?

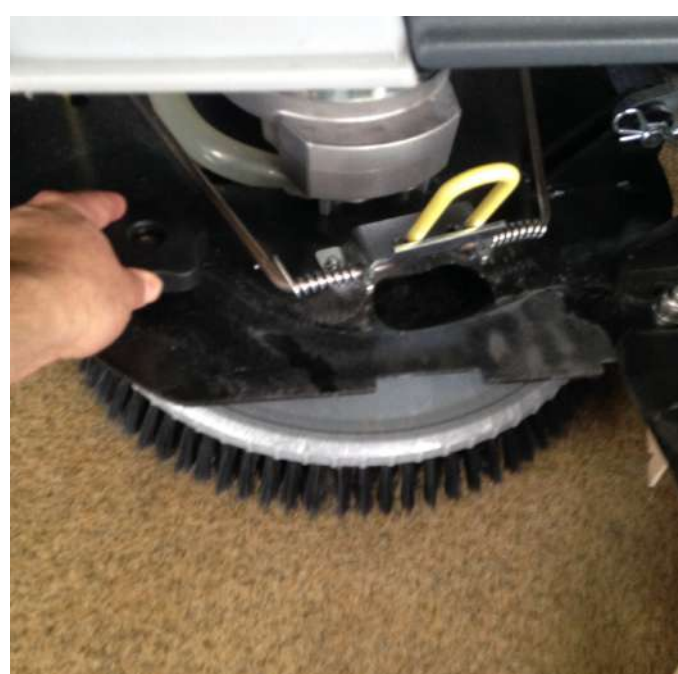

1 Remove side skirt assembly and verify brush installation and condition.



2 Press "I" scroll down to faults and press ">" button to view faults.



3 Turn brushes counter clockwise and check if there are external materials avoiding brush rotating.